

walkaTM

HANDHELD TV

Quick Guide v1.1

Introduction	1
DStv Mobile Walka	1
Step 1: Familiarise yourself with the hardware	2
Step 2 : Charging your Walka	3
Step 3 : Activate your Walka	3
Step 4 : Basic Operation	4
Step 5 : Advanced Operation	4
Channel Scan	5
Resetting your Walka	5
Updating the firmware	6
Changing the Time Zone	7

! Terms & Conditions and the End User Licence Agreement

Must be accepted to use this device. You can view the Terms and Conditions and/or the End User Licence Agreement by doing the following;

1. Go to apps.dstvmobile.com/decoder/terms
2. Email care@dstvmobile.com
3. Visit your local DStv Service Centre and request a copy of the subscription Terms & Conditions or Walka End User licence agreement.

Introduction


Welcome to the exciting world of DStv Mobile. With your Walka handheld TV you will be able to connect to DVB-H broadcast mobile TV and have access to live DStv Mobile content.

This guide will help you activate your Walka so you can start watching right away.


DStv Mobile Walka

Included in the box with the Walka are:


1. USB cable
2. Stand
3. USB charger
4. Quick Guide
5. Earphones
6. Lanyard

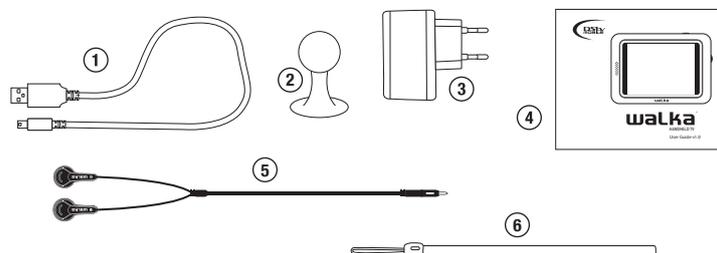




Step 1: Familiarise yourself with the hardware

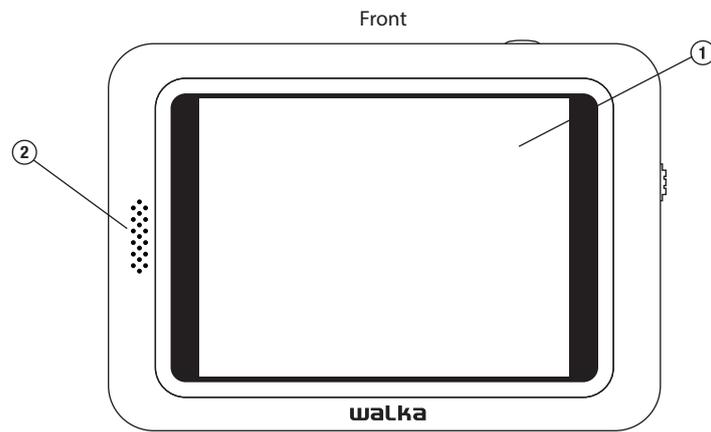

1. Viewing screen
2. Speaker

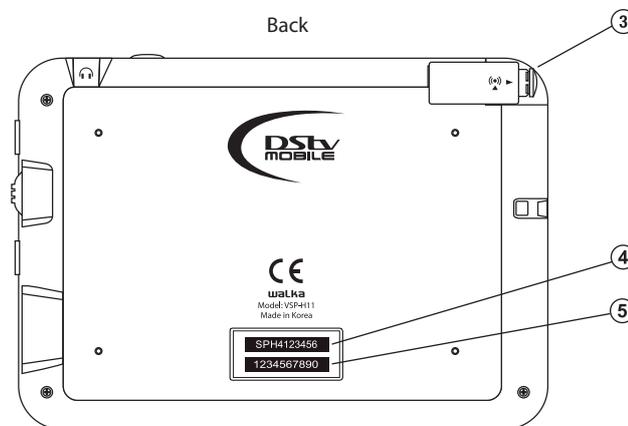

3. Retractable antenna for receiving the DVB-H signal
Important: Extend and position vertically to improve signal reception.
4. Device serial Number.
5. A CAS number is used in conjunction with the serial number when activating the device.

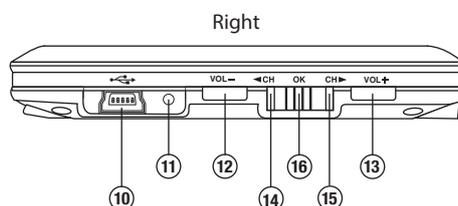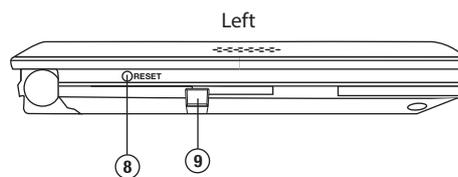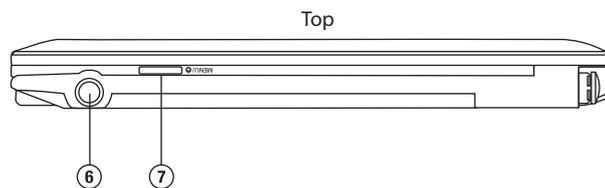


6. Earphone port.
7. Menu/Power button. Pressing and holding the Menu/Power button will turn the device on or off. A short press of the Menu/Power button once will bring up or remove the menu on the device screen.
8. Reset button.
9. Lanyard loop.
10. USB port for charging the device or upgrading firmware.
11. Charge status LED, if the LED is green then the device is charged. If the LED is red the device is charging.
12. Volume Down button.
13. Volume Up button.
14. Previous channel.
15. Next channel.
16. Selection Wheel, pushing the selection wheel will select the on-screen menu item.

Step 2 : Charging your Walka

The Walka comes partially charged. There are 2 ways to charge the Walka. Please note: charging via a power point is faster than charging via the USB port on your computer.

1. Use the provided USB cable and charger.
2. Use the provided USB cable and plug the device into an available USB Port on your computer.

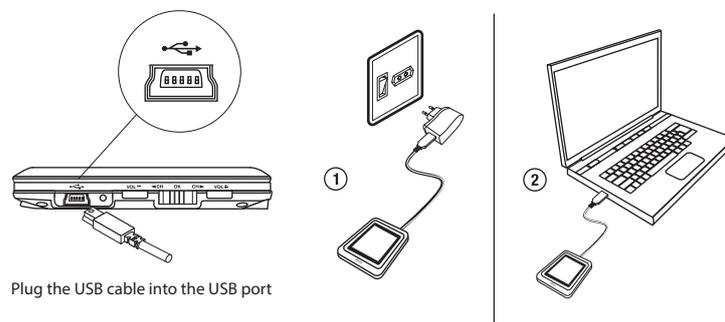

Step 3 : Activate your Walka

You can activate your Walka using one of the two options listed below.

Option 1:

Go to dstvmobile.mobi on your mobile phone, or <http://www.dstvmobile.com> for a list of activation options.

Option 2:

Activate your Walka by calling MultiChoice customer care (see customer care numbers on the next page) and provide the customer service representative with the CA number and the device serial number, found on the back of the Walka.

MultiChoice Customer Care Contact Numbers:

South Africa:	+27 11 289 2222
Ghana :	+233 302 740 540
Kenya :	+254 20 444 9000
Namibia :	+264 61 270 5222
Nigeria :	+234 1 270 3232

Step 4 : Basic Operation

1. To power the device, press and hold Power button (7) until the LCD is turned on and you see the DStv Mobile hello screen.
 2. The splash screen will be displayed, and the device will then connect to the DVB-H network and begin playing.
 3. To change channels on the device, use the Channel Up (15) or Channel Down (14) Selection Wheel to navigate the EPG. Pushing the Selection Wheel (16) will select the highlighted channel and the device will then connect to the channel.
 4. To lower the volume use the Volume Down button (12). To raise the volume press and hold the Volume Up button (13) until desired level is reached.
 5. To power off the device, press the Menu/Power button for five seconds, until the LCD is turned off.
-

Step 5 : Advanced Operation

TV Guide

You can use the TV Guide to view the list of programmes on a specific channel for the next 24 hours. Access the TV Guide by doing the following;

1. Short click on the Menu/Power button. A menu will appear on the screen.
2. Use the Selection Wheel to select TV Guide.
3. You will be presented with a list of programmes that are currently available on the various channels.
4. Use the Selection Wheel to scroll and select a desired channel.
5. You will be presented with a list of programmes on that channel for the next 24 hours.
6. Click on a programme to reveal the synopsis.
7. To exit the TV Guide, click on the Menu/Power button.

Information Plate (iPlate)

The iPlate will provide you with the channel title, start and end time and short synopsis of the programmes you are currently watching. It also allows you to change channels.

To access the iPlate

1. Click on the selection wheel.
 2. You will now be presented with the iPlate at the bottom of the screen.
 3. Scrolling up or down with the Selection Wheel whilst viewing the iPlate will allow you to see the synopsis for programmes on other channels currently playing.
 4. To select a channel press the Selection Wheel in.
 5. To exit the iPlate click on the Menu/Power button.
-


Channel Scan

In the event you lose DVB-H reception while in a coverage area, you will be able to re-acquire the signal by rescanning for channels, do the following:

1. Extend the antenna.
 2. Click on the Menu/Power button.
 3. Click the scroll wheel to select the Channel Scan option.
 4. Click on Channel Scan.
 5. You will be prompted to confirm your selection.
 6. Click OK.
 7. Channel Scan will begin, and once complete will connect to the last channel viewed.
 8. Do not turn off the device while the Channel Scan is in progress.
-


Resetting the Walka (Soft reset)

If you experience an error with your Walka, you can reset it. To do this, you will need to locate the reset point on the left side of the device. Insert a paper clip into the hole. Once the device screen goes to black, remove the paperclip and the device will restart.

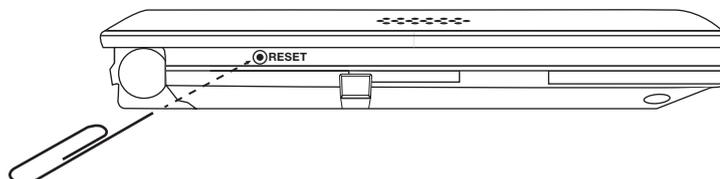

Factory reset (Hard reset)

In the event that the soft reset does not work, it might be necessary to perform a factory reset. To do this, hold down the Menu/Power button for 5 seconds while inserting a paper clip into the reset hole on the left of the device. Then release the Power button and remove the paper clip from the reset hole. The device will power up and you will see the hello screen. Accept the terms and conditions and the device will perform a channel scan.

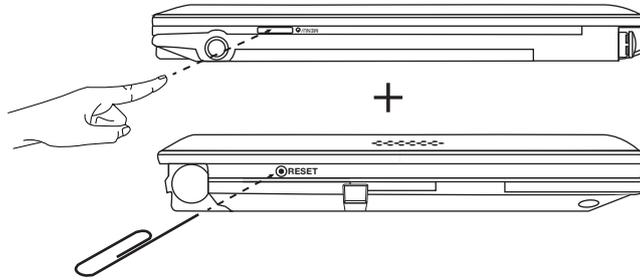

Settings

You are able to adjust a number of settings on the Walka, these include the brightness, contrast and colour.

To adjust the screen settings do the following;

1. Click on the Menu/Power button.
2. Using the selection wheel scroll to the Settings menu item.
3. Choose brightness, contrast or colour from the list of available items.
4. Use the selection wheel to increase or decrease the setting.
5. To accept the desired setting click on the Selection Wheel.


Updating the firmware

1. Go to dstvmobile.com, select the country you are located in from the available map or drop down menu.
2. Click on the Get DStv Mobile Tab, then click on Phones and Devices.
3. Locate the Walka on the list of devices and then click on Read more.
4. Scroll to the bottom of the page and click on Download firmware.
5. Save the firmware to your computer.
6. Turn on the Walka.
7. Short click on the Menu/Power button to access the settings menu, then click on Settings.
8. Scroll down and select the Firmware upgrade option.
9. Follow the on-screen instructions.
10. Once the firmware upgrade is complete the Walka will restart.

Changing the Time Zone

To change your time zone settings;

1. Click on the Menu/Power button.
2. Using the click wheel, scroll to the Settings menu item.
3. Click on Time Zone.
4. Select the time zone for the country that you are in.
5. Click Okay to select.
6. Click on the Menu/Power button to return to the menu.

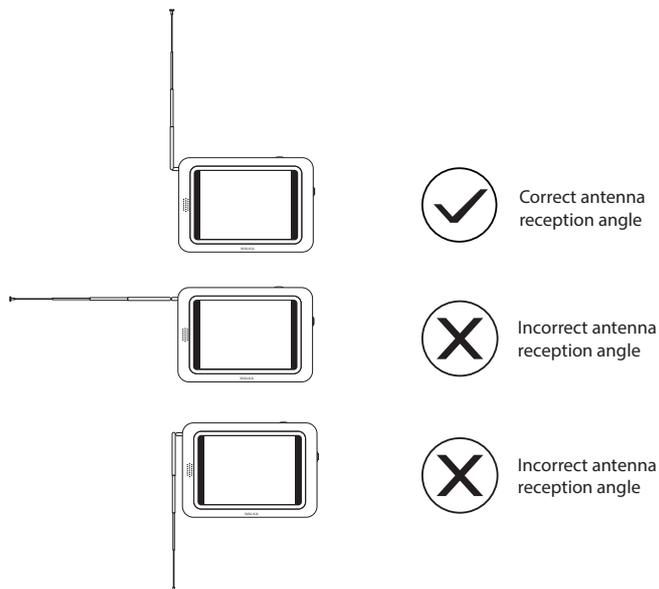

? About DVB-H

DVB-H is a technology that delivers video to mobile devices at a resolution of 320 by 240 pixels. It uses a terrestrial broadcast similar to radio, unlike the satellite technology used for your DStv Service at home. This means that you can enjoy Mobile TV on the move, when in a DVB-H Broadcast coverage area.